

OWNER'S MANUAL

Electric Air Pump

GR-119P Series

 
READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

⚠ WARNING

- For adults only.
- Do not drop equipment into water or expose it to rain or water.
- Do not direct airflow to the face or body.
- Do not operate for more than 5 minutes at a time. And cool for at least 5 minutes.
- Do not block the vent.
- Do not insert objects into the air inlet or outlet.
- The product contains the battery. Do not let it touch any liquids, and keep away from fire sources and environments with high temperatures exceeding 50°C.
- During the use of the air pump, after the power is too low and under protection, please turn off the switch before charging.

FOLLOW THESE RULES AND ALL INSTRUCTIONS TO AVOID PROPERTY DAMAGE, ELECTRIC SHOCK, BURNS OR OTHER INJURY.

NAMES OF PARTS

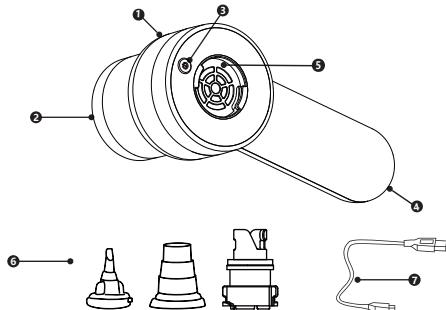


- Parts Description:**
- 1.Pump
 - 2.Inflation Connector
 - 3.Switch
 - 4.Charging port
 - 5.Deflation Connector
 - 6.Nozzles
 - 7.USB Charging Cable

Note: Drawings are for reference only. The actual product may be different

READ AND SAVE THESE INSTRUCTIONS


Operating Instructions

 1. Install a special valve on the inflatable port of the air pump.
As shown in Figure(1).
2. Insert the air pump with the sleeved air nozzle into the valve and tighten it clockwise. As shown in Figure (2).
3. Hold 2 seconds for switch on,press it for power off,as shown in Figure (5).
4. After the inflation is completed, take out the air pump and turn clockwise to close the valve cover.As shown in Figure (3).

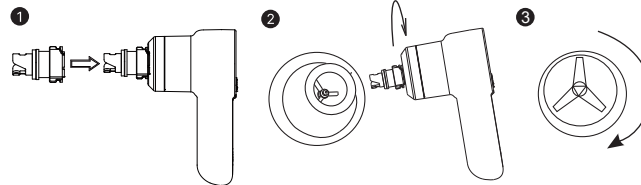

Install the nozzle in the inflation port or deflation port

 1. If necessary, select and replace different inflation nozzles according to the intake valve of the inflation product, as shown in Figure(4).
2. Hold 2 seconds for switch on,press it for power off,as shown in Figure (5).

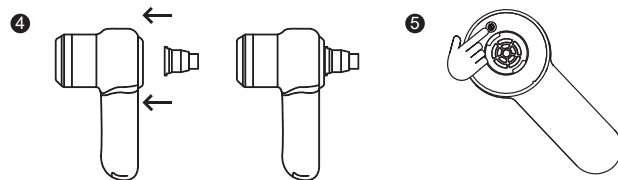

MAINTENANCE INSTRUCTIONS

- No specific air pump maintenance is required. Air pump has no user serviceable parts.
- The batteries are permanently sealed in the pump and cannot be removed or replaced. As the pump weakens from use, recharge the batteries. Do not wait until they are fully discharged.
- Do not dispose of air pump and its batteries in fire. Check your local regulations for proper disposal instructions.
- Keep away from heat or direct sunlight.

Jiangsu Guorun Electric Co.,Ltd

No. 278, Jinhe Road, Jinhu Economic Development Zone,
Jiangsu Province, China

READ AND SAVE THESE INSTRUCTIONS