


RECHARGEABLE AIR PUMP

HT-633 Operation Instructions

Please fully charge the battery once at least per 6 months in order to be normal used of the product.



Dongguan Cola outdoor product co.,Ltd

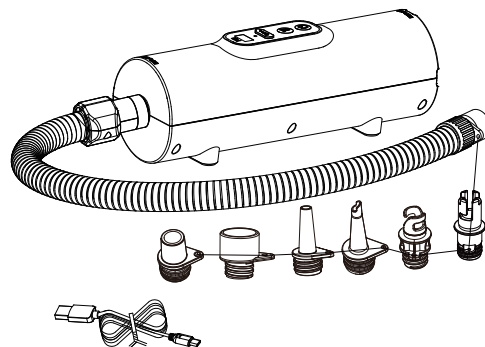

Please read the operation instructions carefully before using this product.
Please operate in the correct way based on complete understanding.

Catalogue

I. Safety Instructions.....	1
I. Product Introduction	1
II. Product parameters.....	1
III. List of Accessories	2
IV. Details of Accessories	2
VI. Inflation Operation	3
VII. Deflation operation.....	3
VIII. Precautions	4
IX. Charging	4
X. Fault Handling.....	5
XI. Maintenance and Storage.....	5
XII. Suggestions	5



X. Fault Handling

Malfunction	Cause	Solution
The air pump cannot be started normally.	1.Check if the battery is fully charged. 2.Overheating or overload causes motor stop.	1. Charge it in time. 2. Cool the motor and restart it. 3. If the problem cannot be solved, please contact local agents or the similar authorized personnel.
Slow or abnormal inflation.	1. Check whether the hose is blocked or cracked. 2. The joint between the hose and air pump or air bag is not installed properly.	1. Change the hose or make it unblocked, and check whether the hose is cracked. 2. Reinstall the hose. 3. If the problem cannot be solved, please contact with the manufacturer or its service agent or the similar authorized personnel.
Hot	Temperature alarm.	Heat dissipation is required.
E5	Abnormal charging. The battery temperature is too high.	1. Heat dissipation is required. 2. If the problem cannot be solved, please contact with the manufacturer or its service agent or the similar authorized personnel.
E3	Shutdown protection without increasing air pressure.	Check for air leaks.
E6	Motor overcurrent protection.	Check motor for foreign matter stuck or restart air pump. If the problem cannot be solved, please contact local agents or the similar authorized personnel.
Air pressure does not return to zero	Remove the connecting trachea.	Press and hold the pressure unit toggle button for more than 3 seconds to return to zero.

XI. Maintenance and Storage

- * Please turn off the power switch after use or before moving, servicing or adjusting the product.
- * Cool it well and put it in the box when it is not in use.
- * Please use it indoors, and protect it against direct sun exposure or rain.
- * Please store it in a dry and ventilated place.




XII. Suggestions

- * The warranty period of this product is one year. It is recommended to use original parts; otherwise, any failure thereof will not be covered by the warranty.




VI. List of Accessories

- * Please make sure that the following accessories are in the box before using it, if any missing, please contact with the local service agents

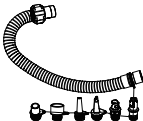Air pump	Hose Air nozzle	Type-C USB cable	Instruction Book
			

V. Details of Accessories

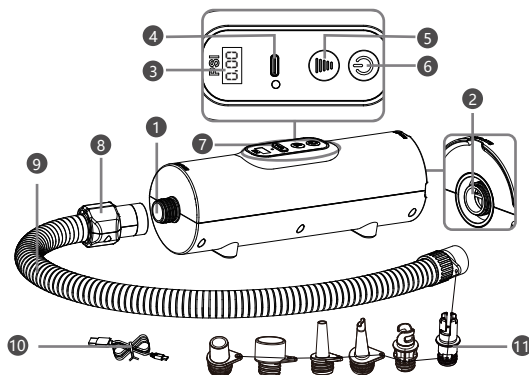


① Inflation inlet	⑦ Silicone Cover
② Deflation outlet	⑧ Flexible conduit adaptor
③ Highlight the LED display	⑨ Hose
④ Type-C power input interface	⑩ Type-C cable
⑤ Increase/Decrease pressure button	⑪ Air nozzle
⑥ On/off button	




VI. Inflation Operation


- * Connect the end with flexible conduit adaptor of the hose with the air pump inflation inlet , and twist clockwise to tighten it (Fig 1).
- * Install the other end of the hose into the supporting air tap of the air ten (Fig 2) and twist clockwise to tighten it, and then insert the inflation valve of the air bag (Fig 3).
- * After finishing the above steps Press the On/Off button ⑥ for 2 seconds to the display will light up short press the On/Off button ⑥ open to start inflating.
- * Press the increase/decrease pressure button ⑤ to select the until you need, with the range of the pressure value from 0 to 10PSI, (1PSI=0.0689BAR=6.89KPA) .

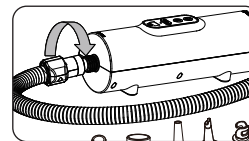

(Fig 1)

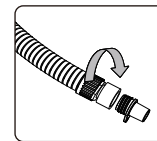

(Fig 2)

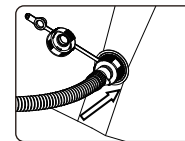


(Fig 3)

- * During the inflating process, you can press increase/decrease pressure button ⑤ to increase or reduce the pressure value, and press the On/Off button ⑥ to stop.
- * Working state, press and hold the On/Off button for 3 seconds to directly start the high pressure pump.
- * When the pressure reaches the set value, the air pump will stop working automatically.
- * Notice: Upon the completion of inflation, it will turn off automatically without other operations within 1 minutes.
- * When not use, please turn off the power switch, please take down the hose from the air pump air bag and store it.
- * Notice: The factory set pressure value of the air pump is 10PSI (1PSI =0.0689BAR=6.89KPA), and at the time of the secondary use, the set pressure value for the last time use will be displayed by default.

VII. Deflation Operation

- * Remove the hose from the inflation inlet, Connect the end with flexible conduit adaptor of the hose with the air pump deflation outlet, and twist clockwise to tighten it (Fig 4) and the other end shall still be to the air ten.
- * In the standby status, Press the On/Off button ⑥ open to start deflation, until all the gas is discharged and then press the On/Off button ⑥ for 2 seconds to stop working.
- * When not use, please take down the hose from the air pump air bag and store it.

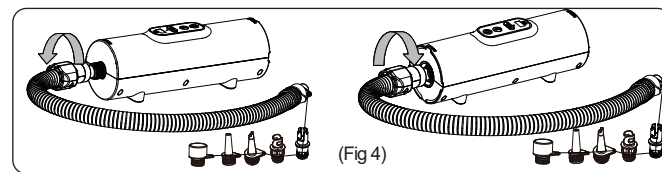


(Fig 4)

VIII. Precautions

- * The pump uses Type-C USB of 5V/2A or 9V/2A for charging. Product shall not be started during charging.
- * Do not block the inflation inlet and deflation outlet and ensure that the inflation inlet and deflation outlet shall remain smooth at all time.
- * Observe the local waste treatment provisions and it is not allowed to throw the air pump away randomly.
- * Don't use this product when the hose is damaged, and please change the hose immediately.
- * Don't pull out the hose when inflating, because that the high pressure may hurt the physical body.
- * Don't make the air pump work for more than 10 minutes, because that motor overheating may cause internal damaged and the air pump shall be fully cooled for 15 minutes after continuously working up to 10 minutes.
- * Please don't use this air pump if any part is damaged and please contact with the professional personnel to repair it.
- * In order to prevent risk, the inflation inlet shall not be forward to face or body.
- * Please don't leave while inflating.
- *  Disposal: Do not dispose of this product as unsorted municipal waste.
 — The waste must be collected separately for special disposal.
- * The built-in batteries of this product must be removed from the equipment and disposed of properly before being scrapped.
- * Please fully charge the battery once at least per 6 months in order to be normal used of the product.

IX. Charging

- * Please use Type-C USB cable with this product for charging (Fig 5). Charging indicator If the red light is long, charge the device in the slow charging state Indicator Red + Blue light long on indicates that in the fast charging state, full green light.
- * Charging voltage is 5V/2A or 9V/2A. Charging voltage will automatically be identified.
- * Make sure the battery is fully discharged before the first charge. After the battery is discharged, the internal temperature is too high. It is recommended to cool it down before charging it. Do not let the electric air pump in a state of no electricity for a long time.

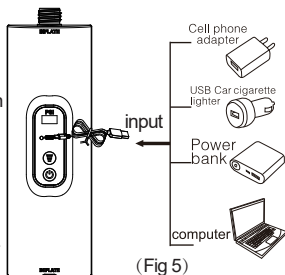

(Fig 5)

RECHARGEABLE AIR PUMP

I. Safety Instructions

- * **Warning:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- * **Warning:** Children shall not play with the appliance.
- * **Warning:** Cleaning and user maintenance shall not be made by children without supervision.
- * **Warning:** Keep the air pump out of reach of children.
- * **Warning:** This product shall not be exposed to the rain or immersed in water.
- * **Warning:** Before inflating, please pay attention to check the maximum bearable pressure of the inflatable product, because the air bag may be damaged upon exceeding the maximum bearable pressure.
- * **Warning:** The product cannot be used under flammable and explosive environment.
- * **Warning:** Please use this equipment at ambient temperature of no more than 40 degrees.
- * **Warning:** The pressure line of the product is only suitable for the original wave pipe.
- * **Warning:** Be sure to check if the wave pipe is broken, and make sure the switch, the pressure screen really work prior to use.
- * **Warning:** Keep away from heat source, humidity, dust and direct sunlight.
- * **Warning:** Do not throw this product into fire for fear of explosion, battery leakage or other dangers.
- * **Warning:** Do not disassemble the device without authorization. This product does not contain spare parts that can be disassembled/maintained by the user.
- * **Warning:** This product contains batteries that are non-replaceable.
- * **Warning:** The purpose of using this product is limited to the description in the instruction book.

II. Product Introduction

- * HT-633Plus is an intelligent power storage, air pump with Highlight the LED display with preset pressure value and it can inflate inflatable tents, inflatable beds, canoeing, etc. In addition, it has an intelligent pressure system. The air pump will automatically stop inflation when pressure reaches the preset pressure value.
- * This product also can deflate and when the inflatable product is not used, you can use the air pump to empty the air inside for folding and storage.

III. Product Parameters

Pressure	0-10PSI	Noise	≤75dB
Airflow	Low 500L/min High 40L/min	Charging time	
Battery	2000mAh	5V/2A	About 3 hours
Power	90W	9V/2A	About 2 hours
Charging input	Type-C 5V/2A or 9V/2A		